

SERVICE INFORMATION

Date: 01/02/2012

Subject:

altek International Ltd
The Office
Timaru Farm
Barton Road
Elsham, Brigg
North Lincolnshire
England
DN20 0LS.
Tel + 44 (0)1652 688 889
Fax + 44(0) 05603 129 813
sales@altekinternational.com
www.altekinternational.com

MANUAL OPERATION OF ELECTRIC BALL VALVE

Step 1: Remove Sight Glass.



Step 2: The arrow indicates the port that is open.




Step 3: The Valve can be turned using a socket on the motor shaft.

IMPORTANT: Before manually operating an Electric ball valve it is recommended that either the valve is disconnected from the power source / fuse removed.



Note: If the valve fails to operate, Check fuse not blown before operating valve manually

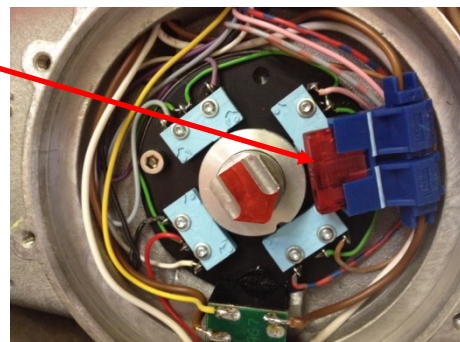

is